



# FLEX+ Bollard

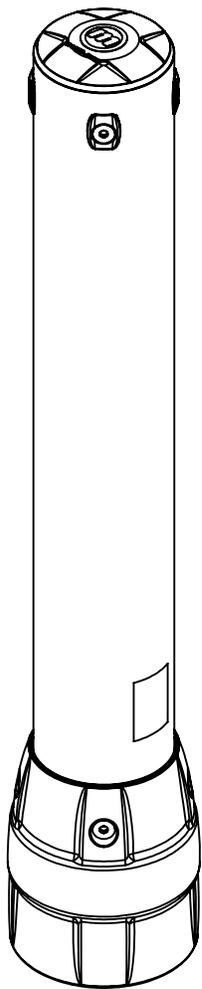


## Installation Instructions




### Components

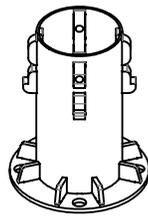

FLX-COR  
Base Core

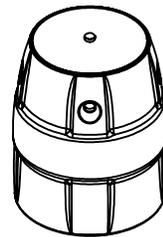


FLX-C-B  
PolyCore Base  
and Hardware

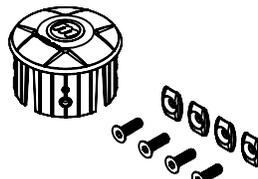

FLX-C-CAP  
Cap, Post Washers  
and Hardware



HW-C-A12-5 OR  
HW-C-M12-130  
Concrete Anchors

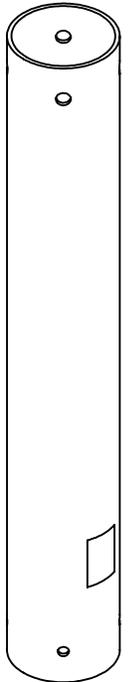

FBL-C-P  
Post


### Required Tools




Hammer Drill With  
Ø 12mm [1/2in] Masonry Bit



Impact  
Driver

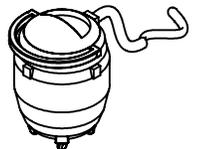

Vacuum



Marker



Extender



Hex Socket  
17mm [3/4in]



Hex Bit  
8mm [5/16in]



**McCue Corporation**  
Danvers, Massachusetts, USA  
+1(800) 800 8503  
[cservices@mccue.com](mailto:cservices@mccue.com)

**McCue UK**  
Milton Keynes, United Kingdom  
+44 (0)1908 365 511  
[uksales@mccue.com](mailto:uksales@mccue.com)

**McCue Asia**  
Xiamen, Fujian, China  
+8 592 2200790  
[rchen@mccue.com](mailto:rchen@mccue.com)

**McCue Europe**  
Magirus-Deutz-Straße 14  
89077 Ulm, Germany  
+49 731 40 38 82 68  
[eu-sales@mccue.com](mailto:eu-sales@mccue.com)





[mccue.com](http://mccue.com)




# Step 1




Marker

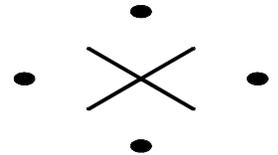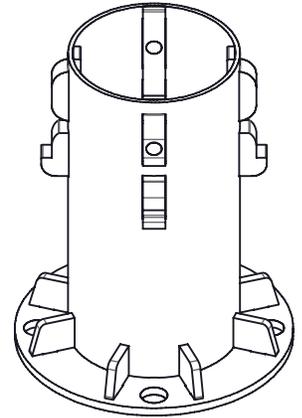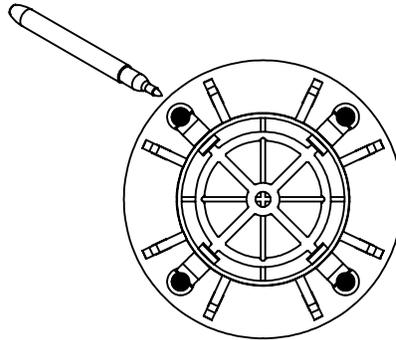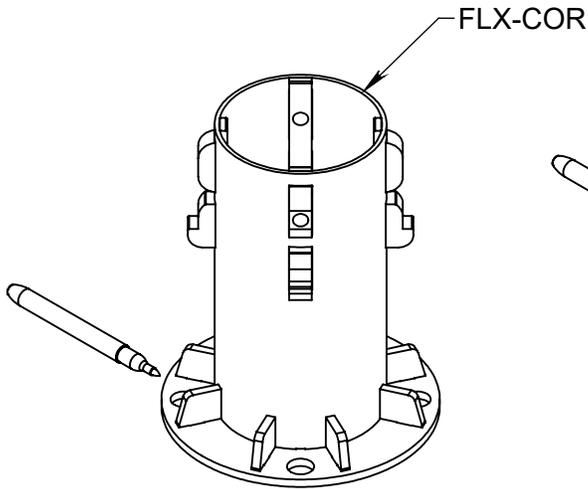

# Step 2

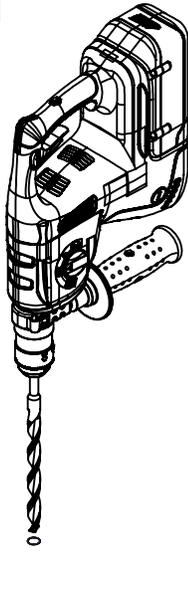


Hammer Drill With  
Ø 12mm or 1/2in Masonry Bit

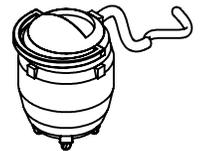


Vacuum

HW-C-A1250  
IMPERIAL  
ANCHOR DETAIL

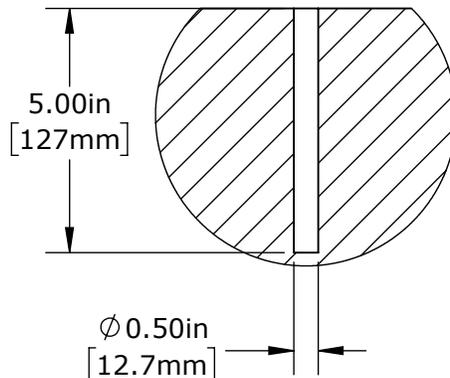

HW-C-AM12-130  
METRIC  
ANCHOR DETAIL

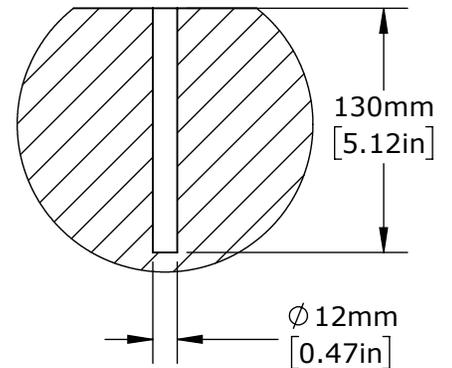

# Step 3




Impact Driver




Extender



17mm [3/4in] Hex Socket

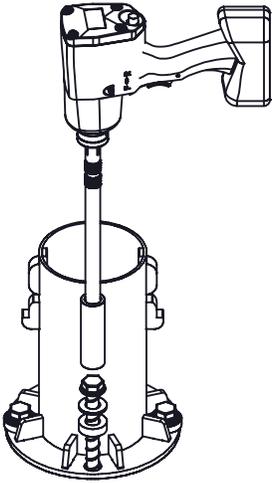

HW-C-A1250 or  
HW-C-AM12-130


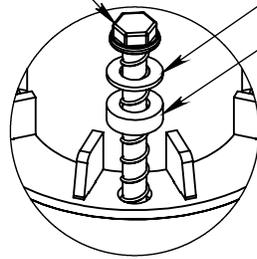


HW-WSH-ANC



HW-DPR

ANCHOR DETAIL


# Step 4

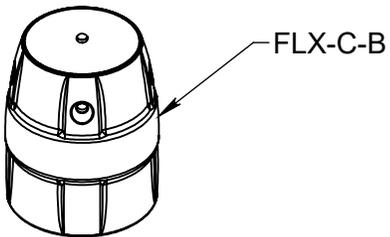

FLX-C-B

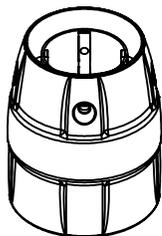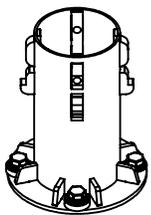

# Step 5

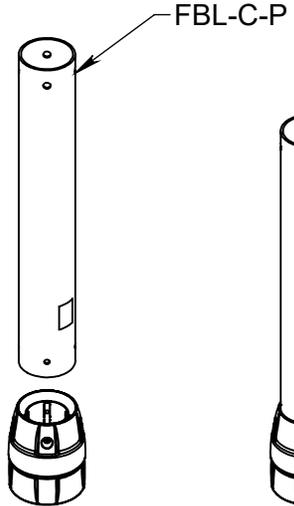

FBL-C-P





# Step 6






Impact Driver



Hex Bit  
8mm [5/16in]

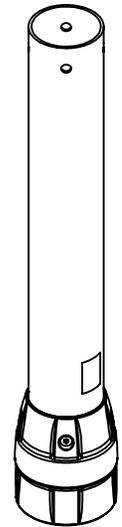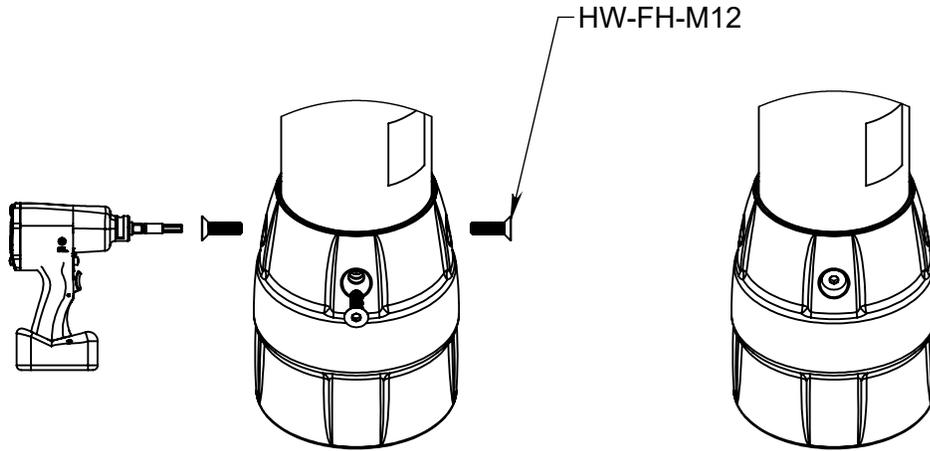

# Step 7

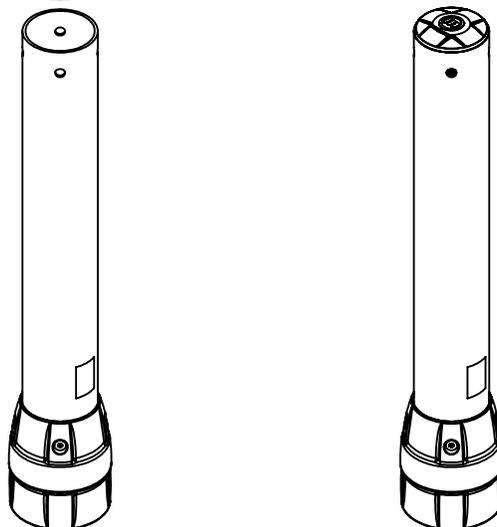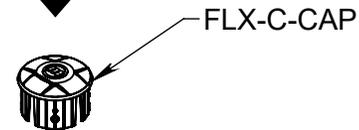


# Step 8




Impact Driver



Hex Bit 8mm [5/16in]

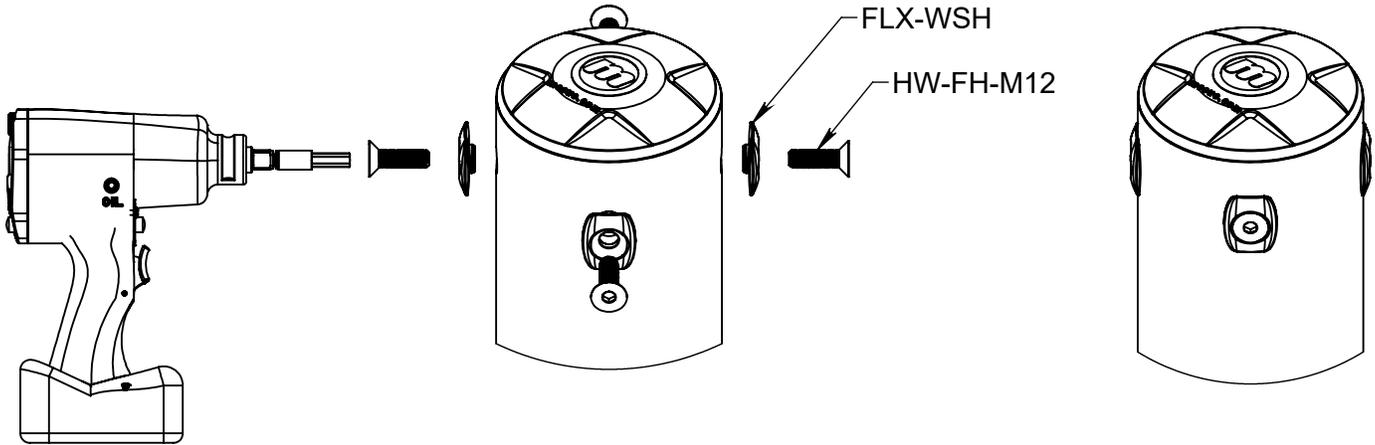


# Installation Complete

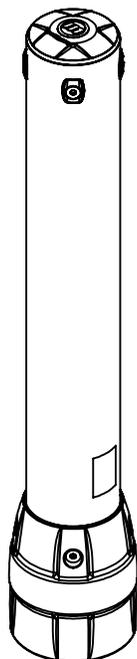


# FLEX+ Pedestrian Swing Gate Add On Kit



## Installation Instructions

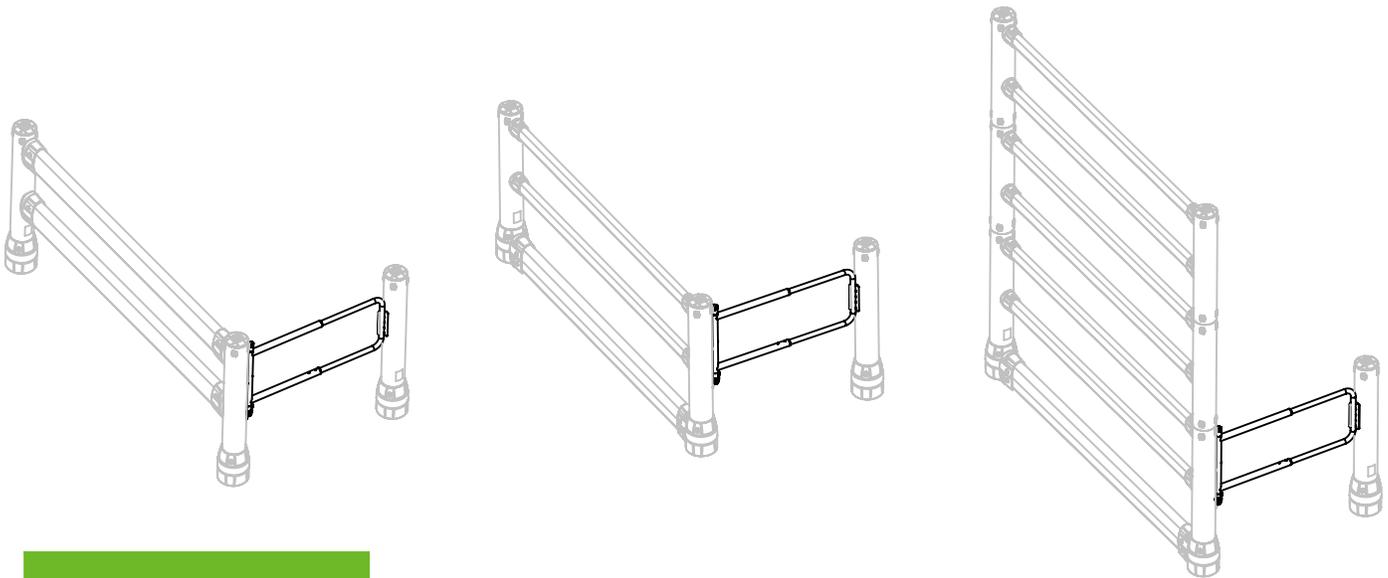


### Components

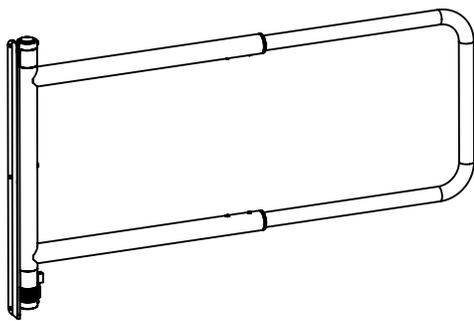

FPA-K-PSG-307



M6X1mm x 25.4mm BHS  
M6X1mm INTERNAL NUT

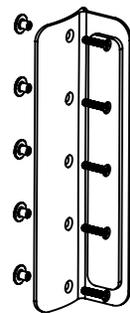

FPA-C-BRK-HW


### Required Tools



7mm



5mm

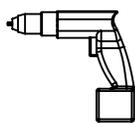

DRILL




5/32"



4mm



PENCIL



TAPE MEASURE



PHILLIPS  
BIT



**McCue Corporation**  
Danvers, Massachusetts, USA  
+1(800) 800 8503  
[cservices@mccue.com](mailto:cservices@mccue.com)

**McCue UK**  
Milton Keynes, United Kingdom  
+44 (0)1908 365 511  
[uksales@mccue.com](mailto:uksales@mccue.com)

**McCue Asia**  
Xiamen, Fujian, China  
+8 592 2200790  
[rchen@mccue.com](mailto:rchen@mccue.com)



**McCue Europe**  
Magirus-Deutz-Straße 14  
89077 Ulm, Germany  
+49 731 40 38 82 68  
[eusales@mccue.com](mailto:eusales@mccue.com)

[mccue.com](http://mccue.com)



# Step 1


Install FLEX+ Products with acceptable spacing as shown. Refer to product specific installation instructions for installation procedures.

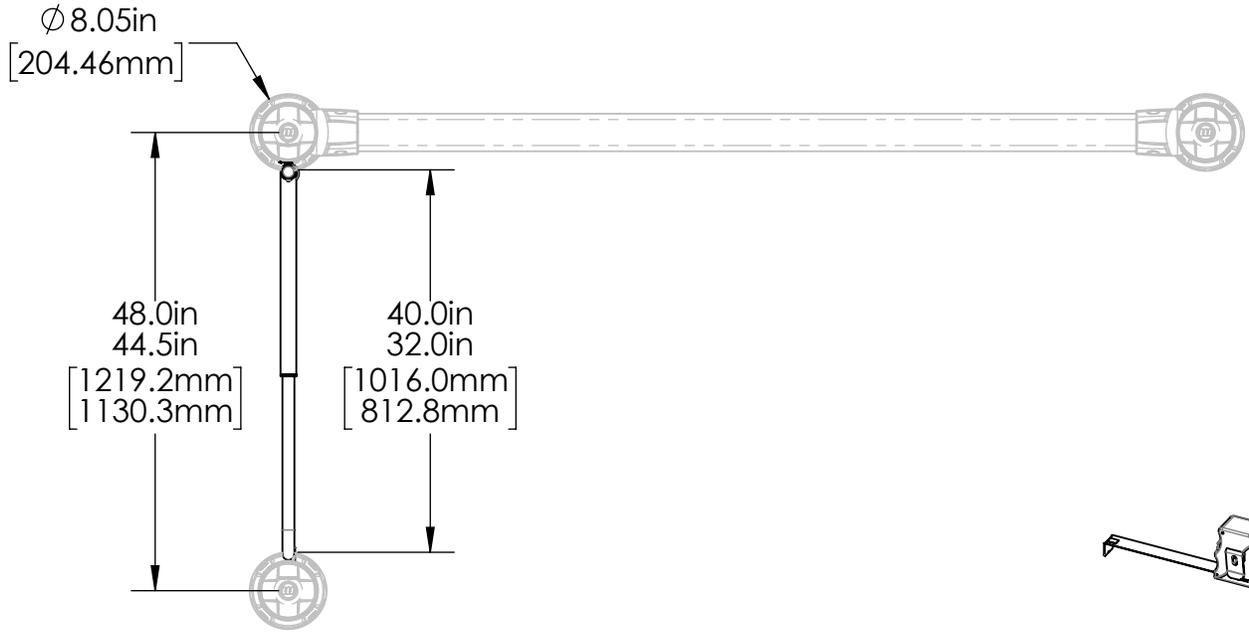

TAPE MEASURE


# Step 2

Locate gate on center and height shown and mark the (6) mounting holes on pivoting arm. Set swing gate to a side before drilling holes. Locate marks and drill with 7mm Diameter drill bit and drill through one wall of FLEX+ POST.

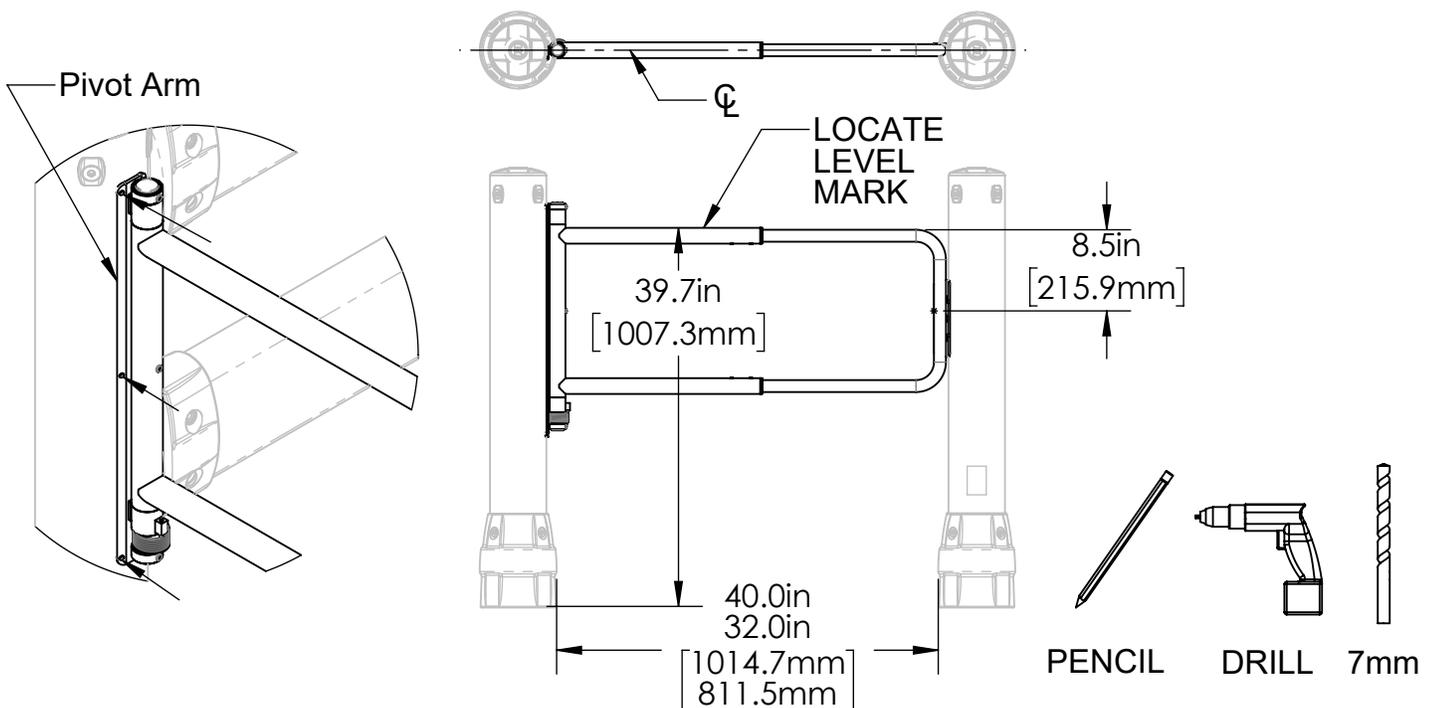


## Step 3

Remove FLEX+ CAP and secure pivoting arm with (6) internal nuts in post and (6) M6x1mm x 25.4mm button head cap screws, using a 4mm Hex Allen key until tight.

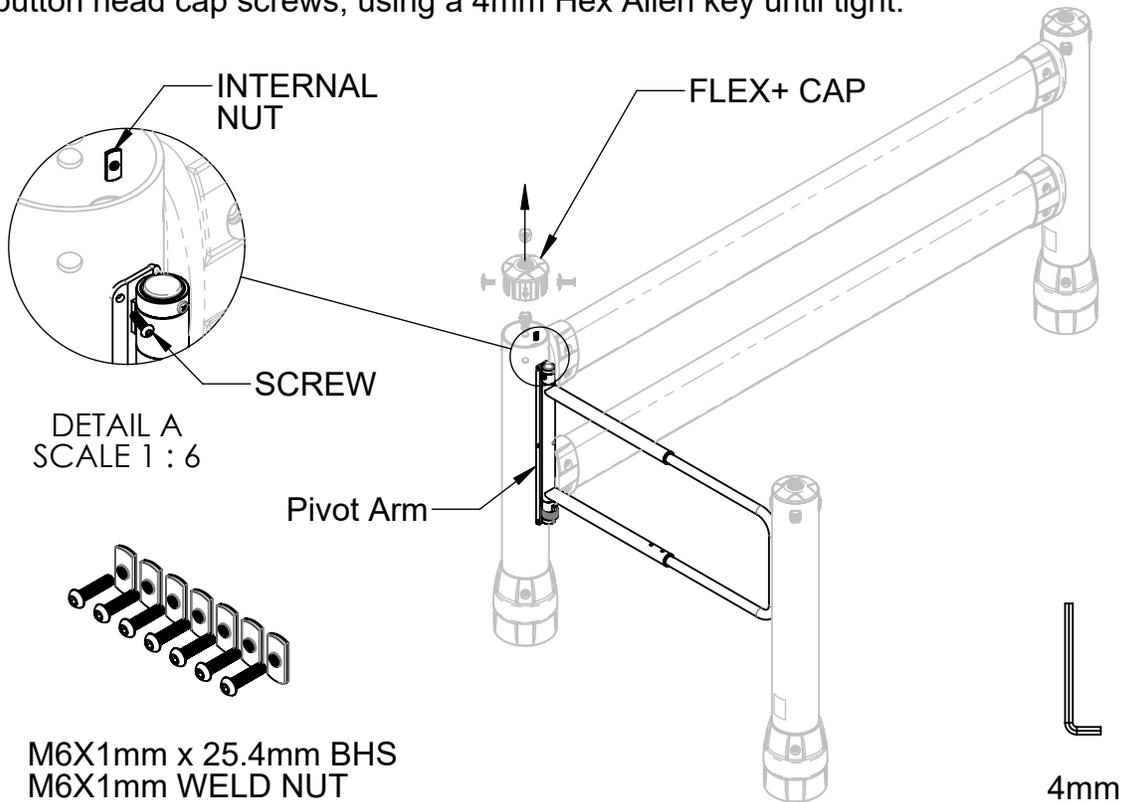


## Step 4

Locate stopper on center. Move swing gate away from gate stopper. Mark the (5) holes and drill with 5mm diameter drill bit and drill thru one wall of FLEX+ POST.

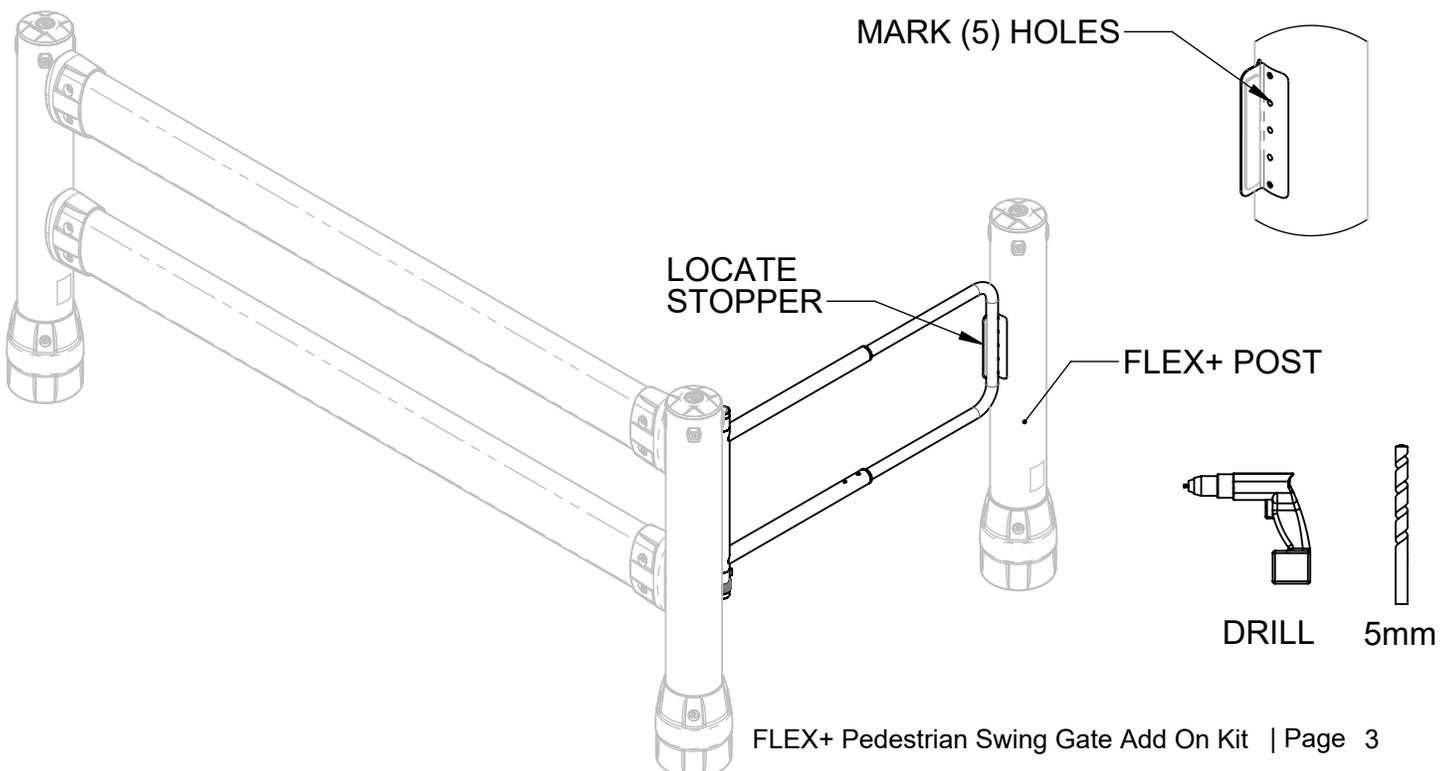

## Step 5

Remove FLEX+ CAP to secure stopper to drilled holes. Move swing gate away from gate stopper. Secure gate stopper to FLEX+ POST with (5) M4x0.7mm round nuts and (5) M4x0.7x20mm flat head screws until flush and tight.

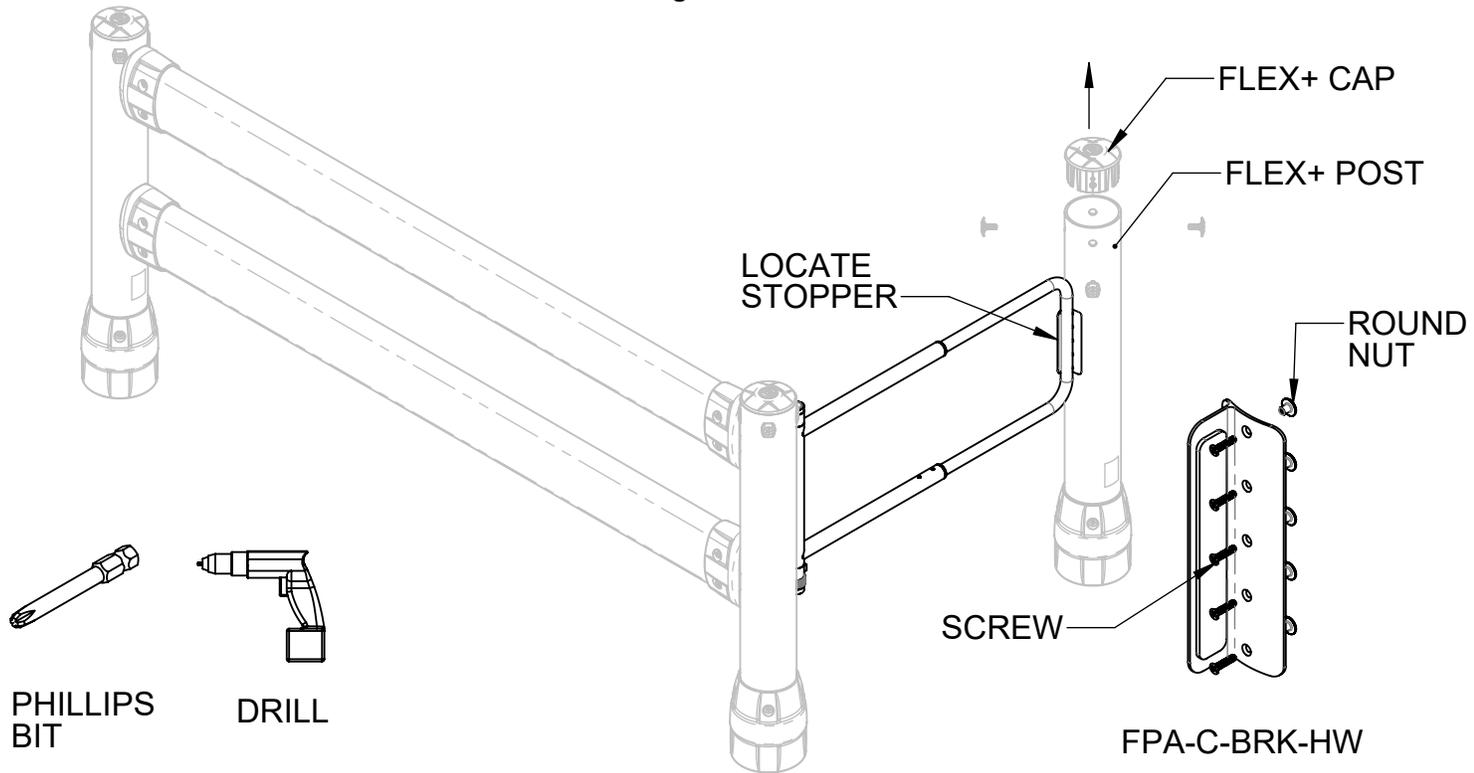

## Step 6

Telescoping arm can be adjusted by loosening set screws. Secure telescoping arm by tightening all (4) set screws with 5/32" Drive Size Allen key.

