



Column Protector


Installation Instructions

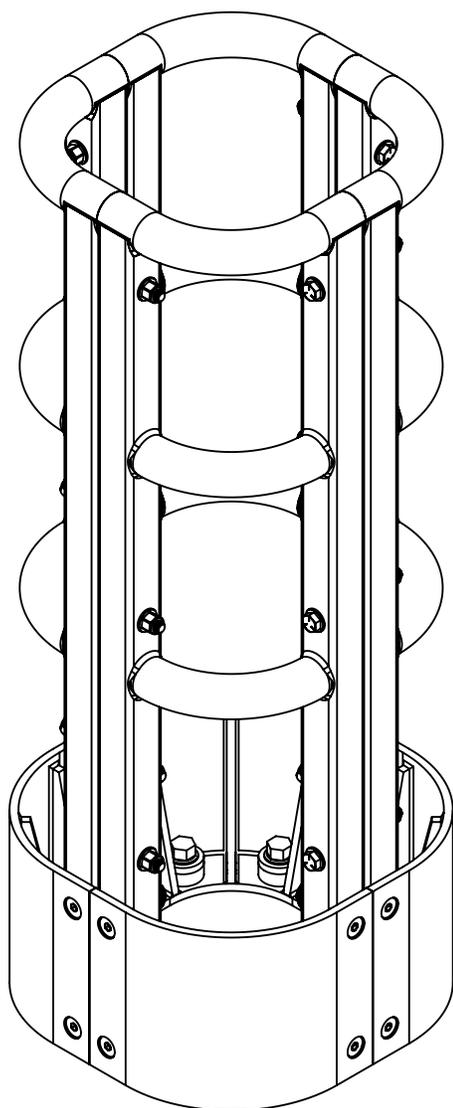


Components

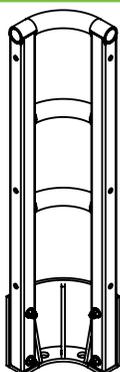

Column Protector 8
Corner
(CPR-K-C08-###)

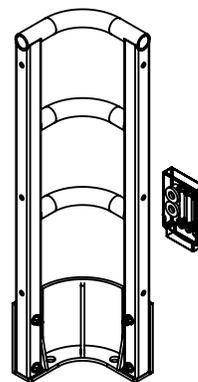

Column Protector 12
Corner
(CPR-K-C12-###)

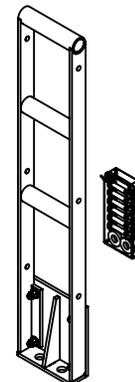

Column Protector 8"
Extender (Optional)
(CPR-K-E08-###)



5/8" Anchor
(CS-HW-A58)



5/8" Damper
(HW-C-DPR)



5/8" Washer
(HW-C-WSH)



1/2" Hex
Head Bolt



1/2" Flat
Head Screw

Required Tools



Extender




Allen Key
5/16"



Hex Socket
15/16" & 3/4"



Tape
Measure



Marker




Socket
Wrench



Impact
Driver



Vacuum

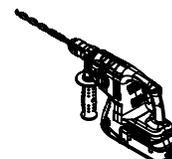

Hammer Drill With
Ø 5/8" Masonry Bit



McCue Corporation
Danvers, Massachusetts, USA
+1(800) 800 8503
cservices@mccue.com

McCue UK
Milton Keynes, United Kingdom
+44 (0)1908 365 511
uksales@mccue.com

McCue Asia
Xiamen, Fujian, China
+8 592 2200790
rchen@mccue.com

McCue Europe
Magirus-Deutz-Straße 14
89077 Ulm, Germany
+49 731 40 38 82 68
eusales@mccue.com

mccue.com





Step 1




Tape Measure

Marker

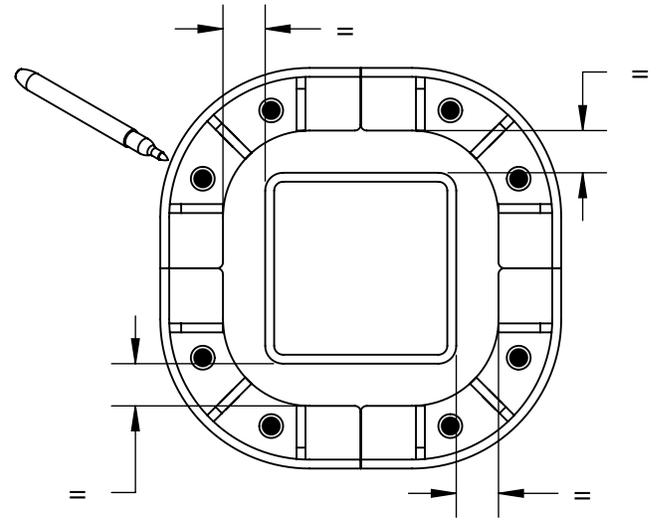
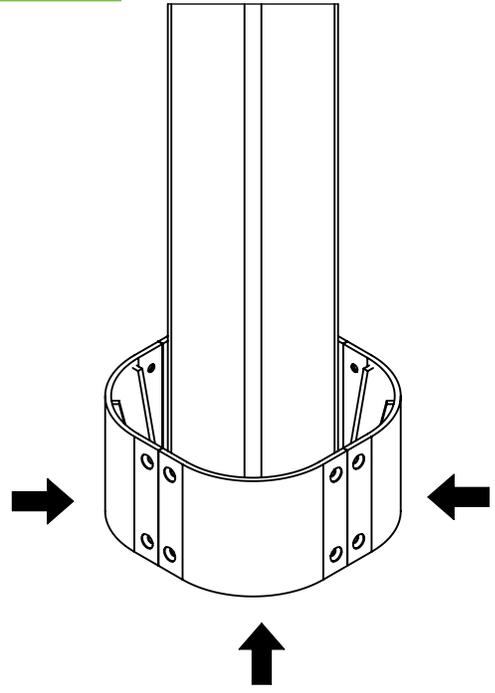


Step 2

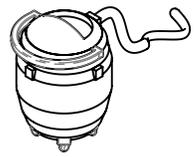


Hammer Drill With
 $\phi 5/8"$ Masonry Bit

Vacuum

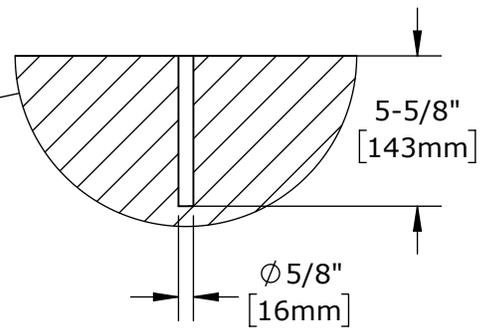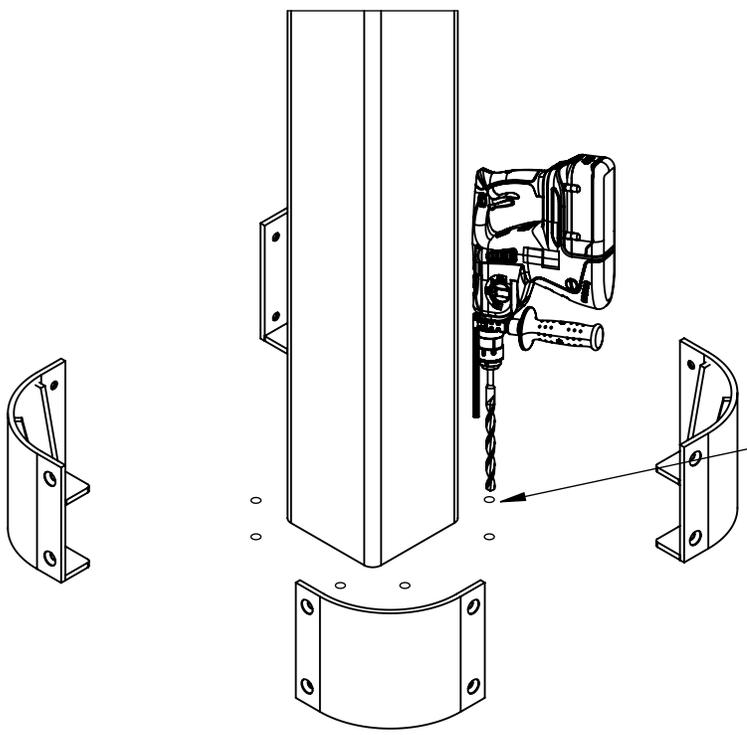

Step 3

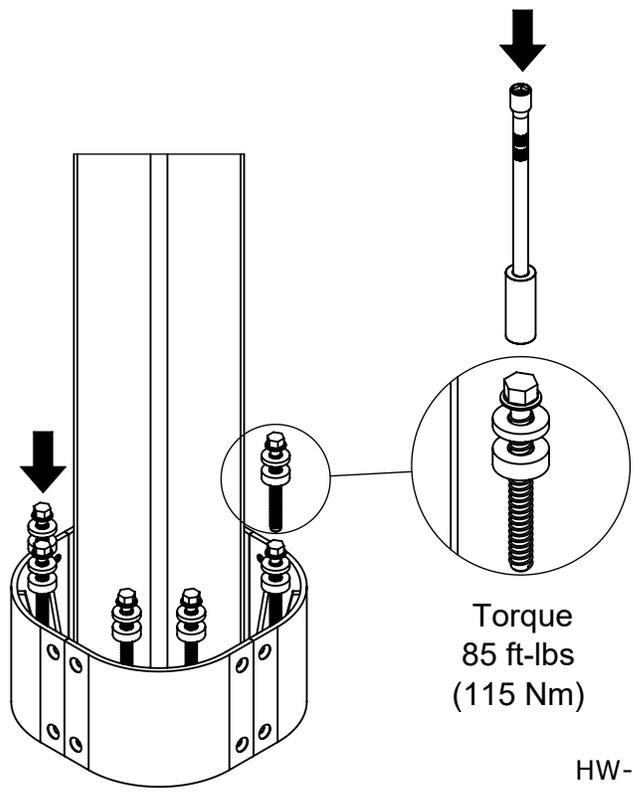

Impact Driver



Extender



15/16" Hex Socket




5/8" Anchor (CS-HW-A58)




5/8" Damper (HW-C-DPR)



5/8" Washer (HW-C-WSH)

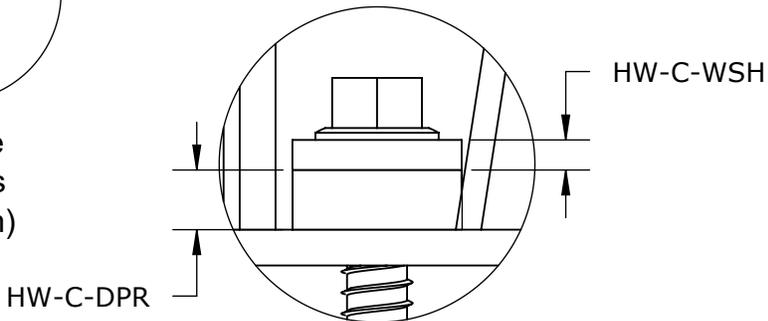

Step 4

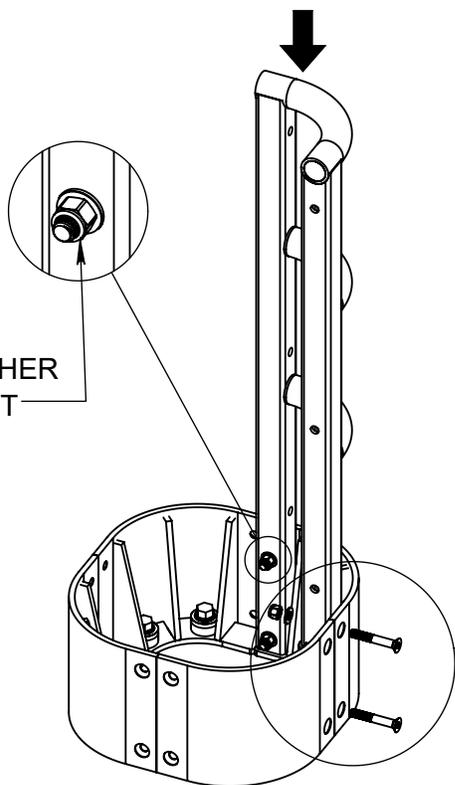

Allen Key 5/16"




Socket Wrench




Hex Socket 3/4"



1/2" Flat Head Screw

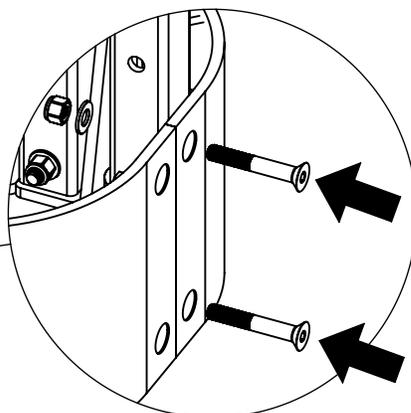

Step 5

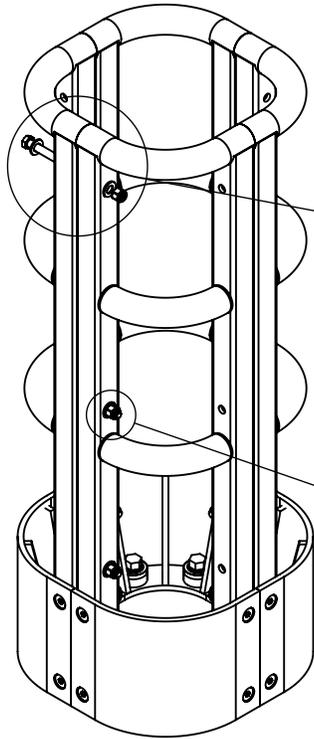

X4

Step 6

