



# GroundBarrier Double

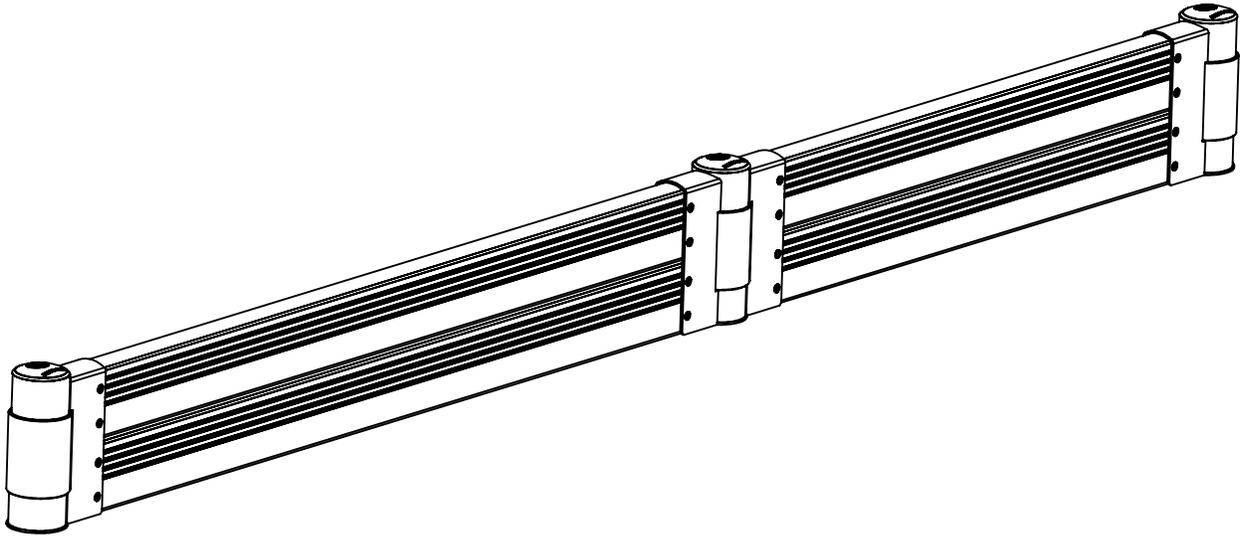


## Installation Instructions




### Components

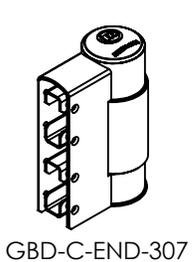


GBD-C-END-307

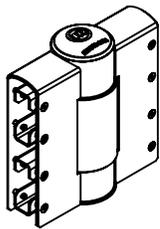


GBD-C-MID-307

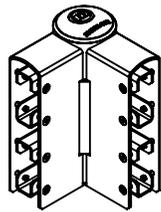

GBD-C-CNR-307

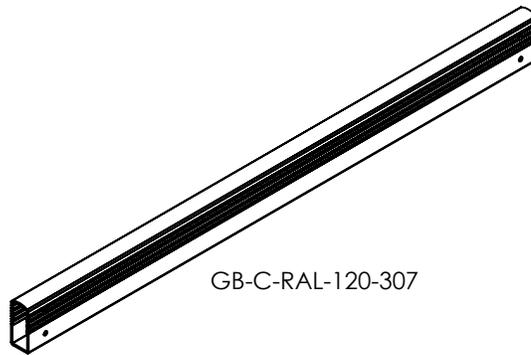

GB-C-RAL-120-307

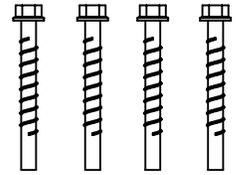


Imperial HW-C-A12 (x6)  
[Metric HW-C-A12-M (x6)]

### Required Tools



Marker



Tape Measure



Miter Saw



Drill



3/4"  
[20mm]  
HSS Drill Bit



Hammer Drill



1/2"  
[12mm]  
Hammer Drill  
Drill Bit



Socket  
Extension



8mm Hex  
Bit



Impact  
Driver



3/4"  
[19mm]  
Socket



Vacuum



#### McCue Corporation

Danvers, Massachusetts, USA  
+1(800) 800 8503  
[cservices@mccue.com](mailto:cservices@mccue.com)

#### McCue UK

Milton Keynes, United Kingdom  
+44 (0)1908 365 511  
[uksales@mccue.com](mailto:uksales@mccue.com)

#### McCue Asia

Xiamen, Fujian, China  
+8 592 2200790  
[rchen@mccue.com](mailto:rchen@mccue.com)


#### McCue Europe

Magirus-Deutz-Straße 14  
89077 Ulm, Germany  
+49 731 40 38 82 68  
[eusales@mccue.com](mailto:eusales@mccue.com)



[mccue.com](http://mccue.com)



# Step 1



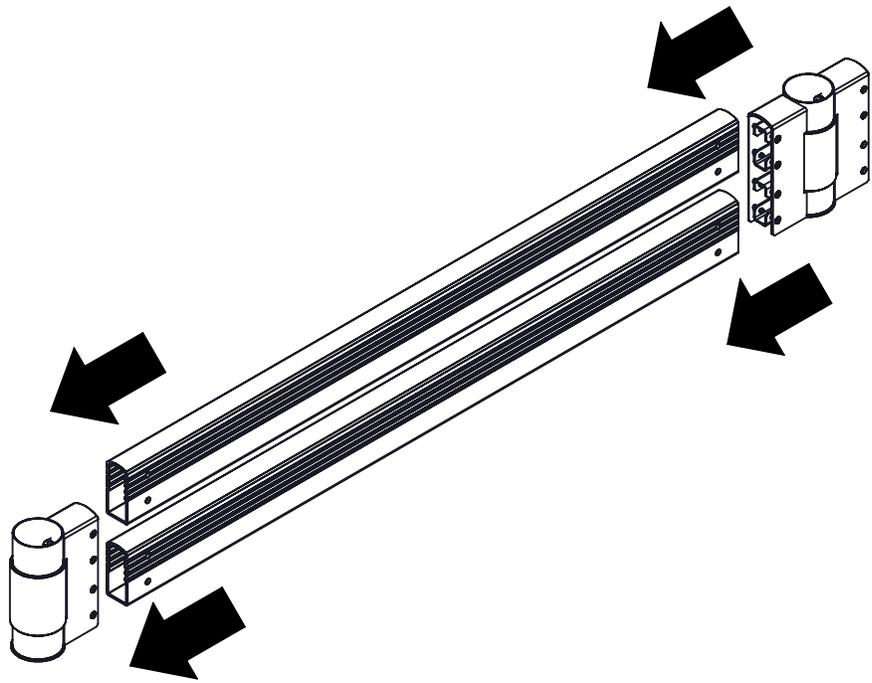


# Step 2

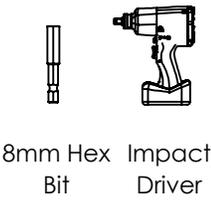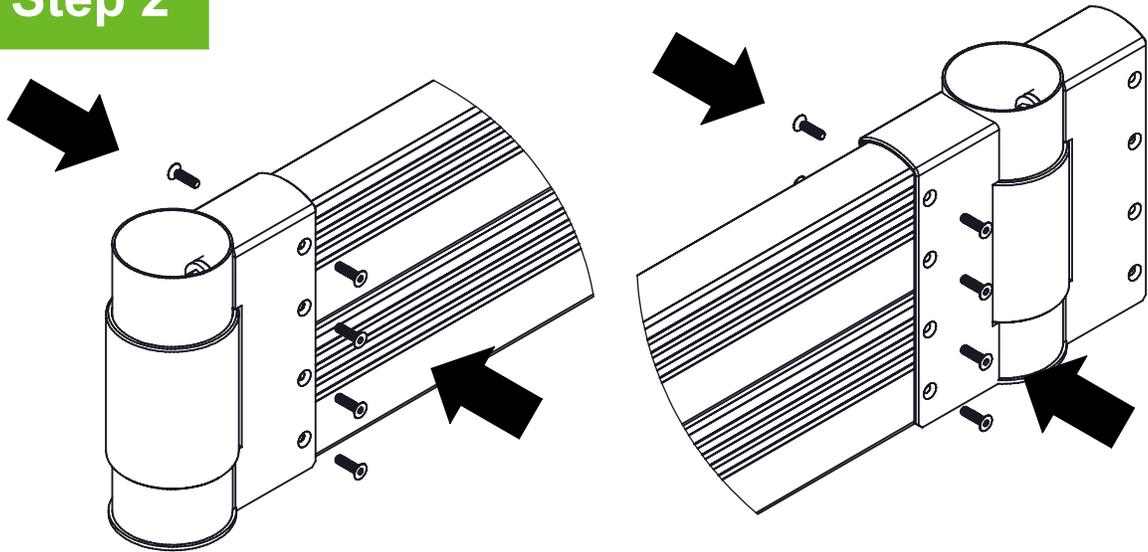


8mm Hex Bit  
Impact Driver

# Step 3

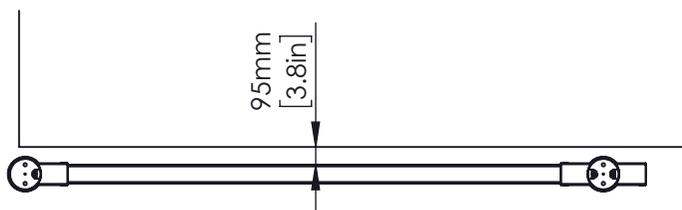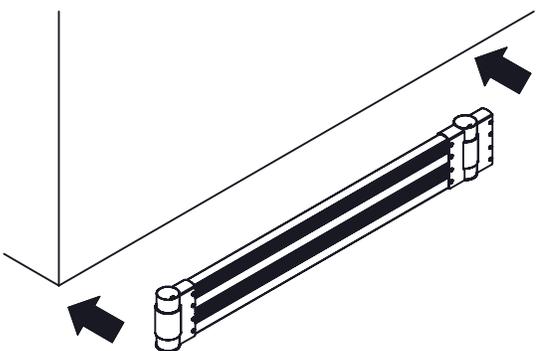


Tape Measure


## Step 4



Marker

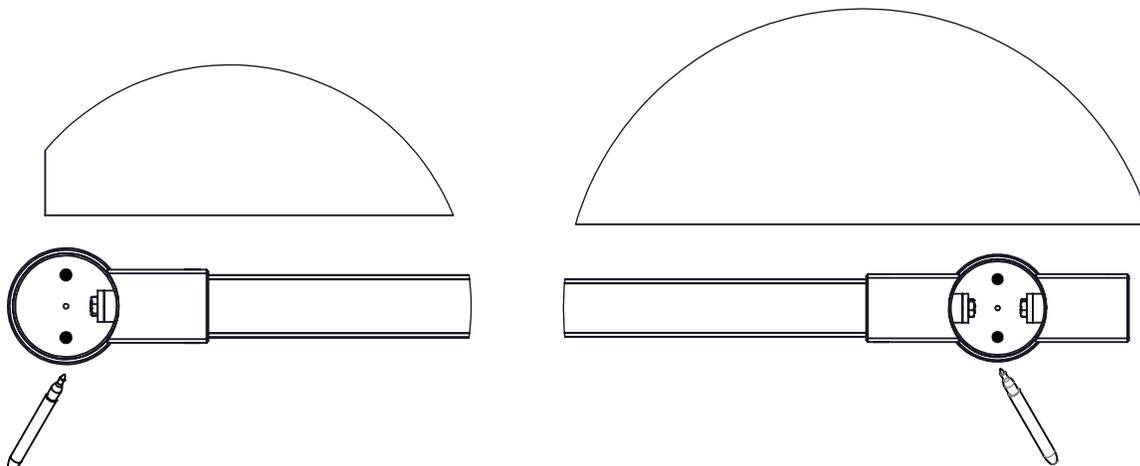

## Step 5

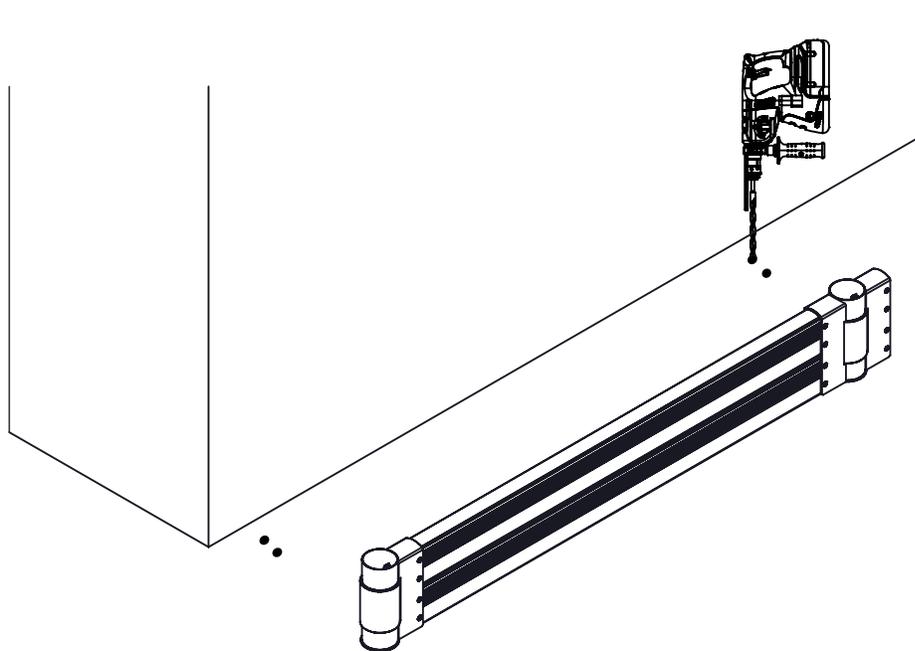


1/2"  
(12mm)  
Hammer Drill  
Drill Bit



Hammer  
Drill

## Step 6

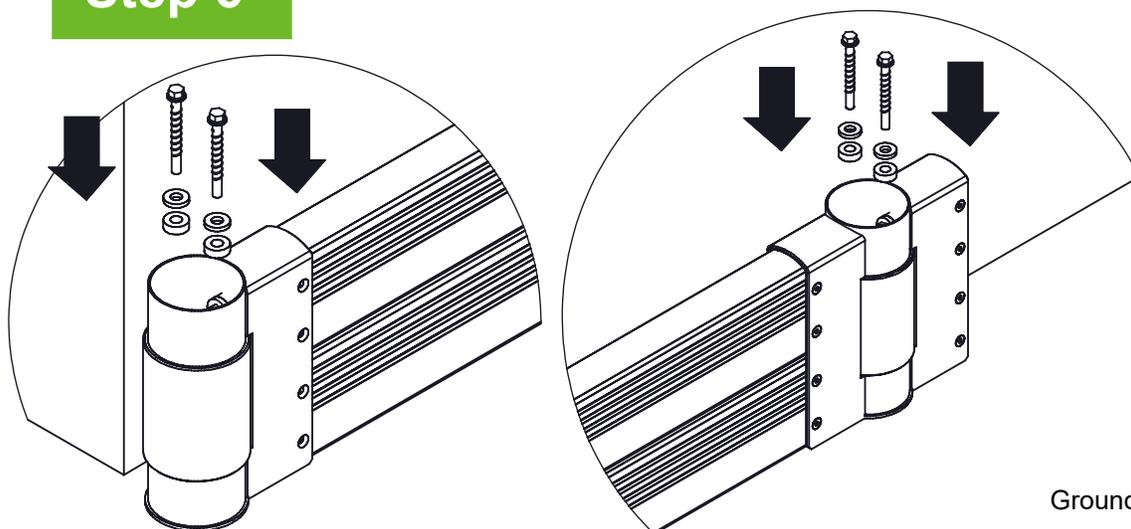

3/4"  
(19mm)  
Socket




Socket  
Extension




Impact  
Driver



# Step 7

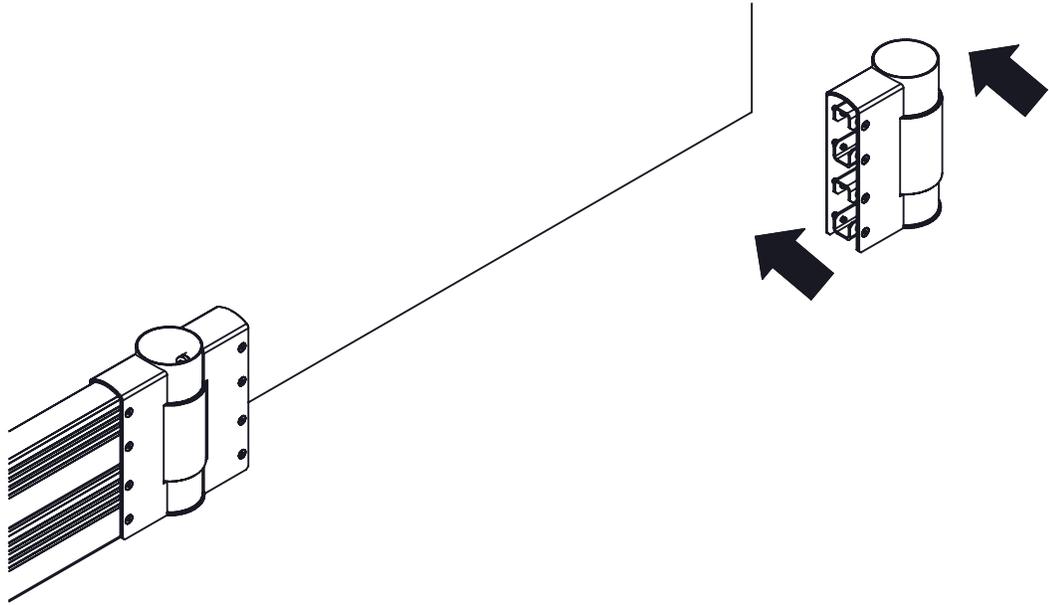

# Step 8




Tape Measure



Dim 'A'  
(Inside to Inside)

# Step 9

(Custom Cut Lengths)

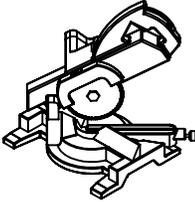

Miter Saw



Dim 'A' - 10mm  
[Dim 'A' - 0.4in]



Cut

# Step 10

(Custom Cut Lengths)




Marker

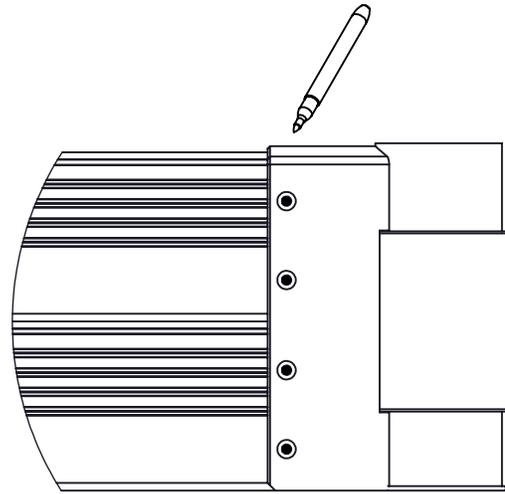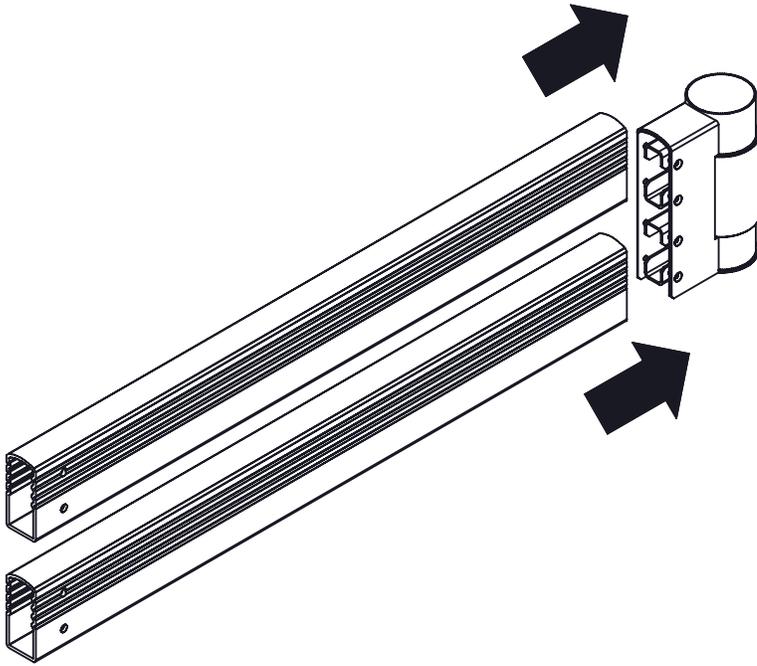

# Step 11


(Custom Cut Lengths)

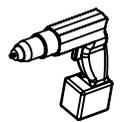


Drill




3/4"  
(20mm)  
HSS Drill Bit

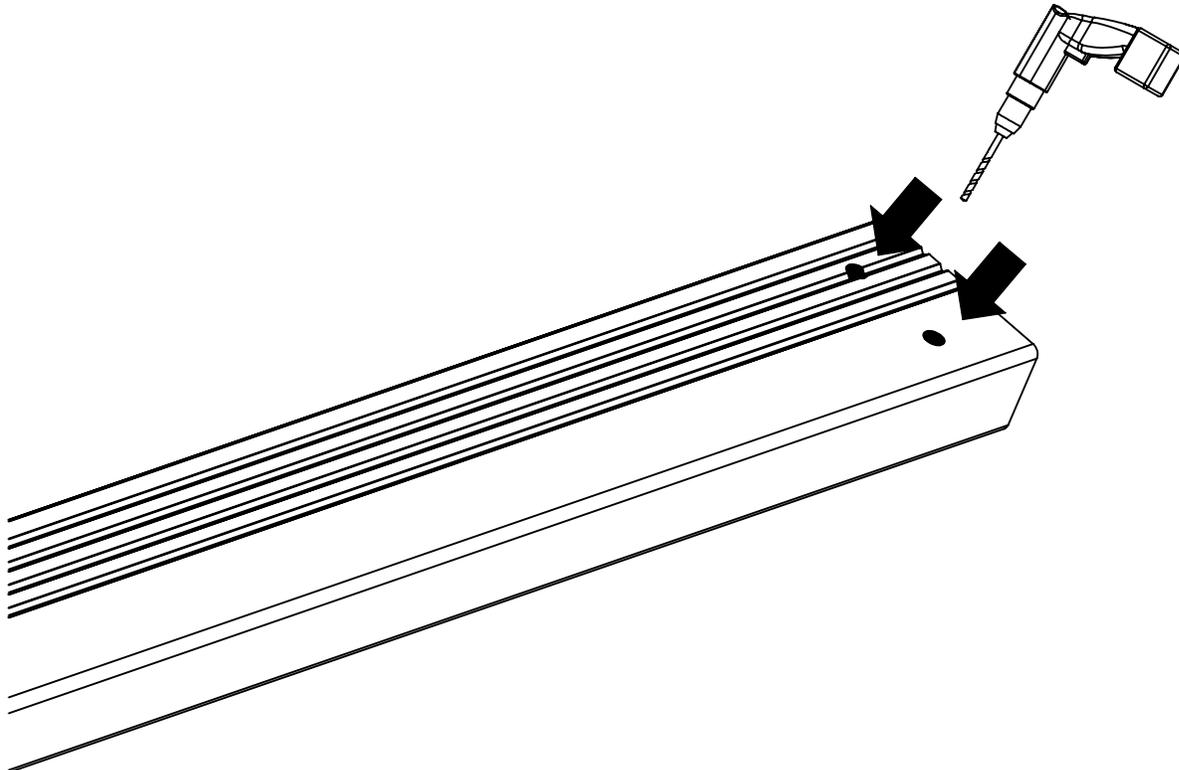


# Step 12

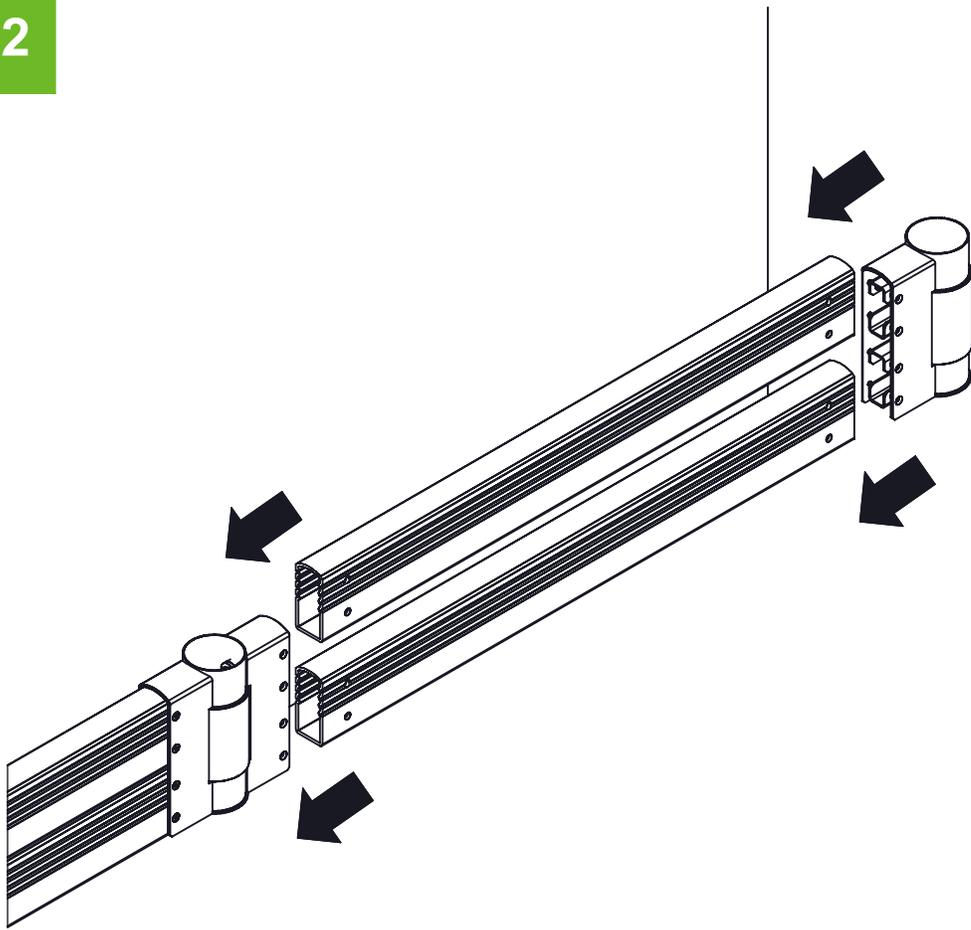


# Step 13



Marker

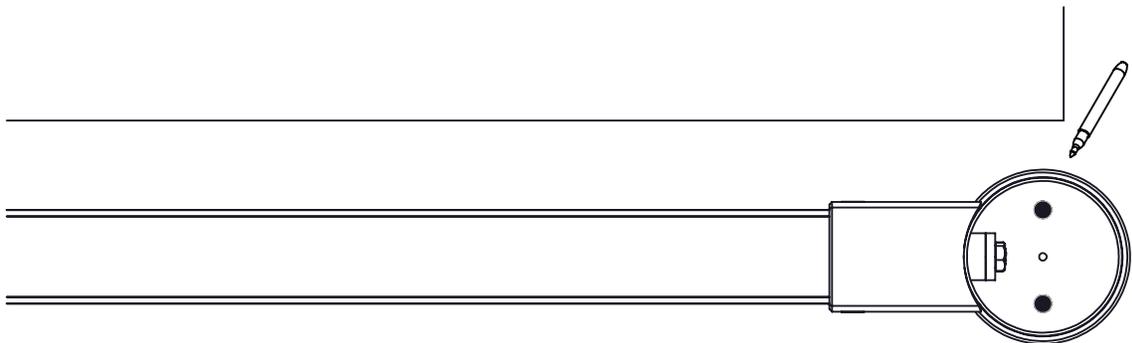


# Step 14

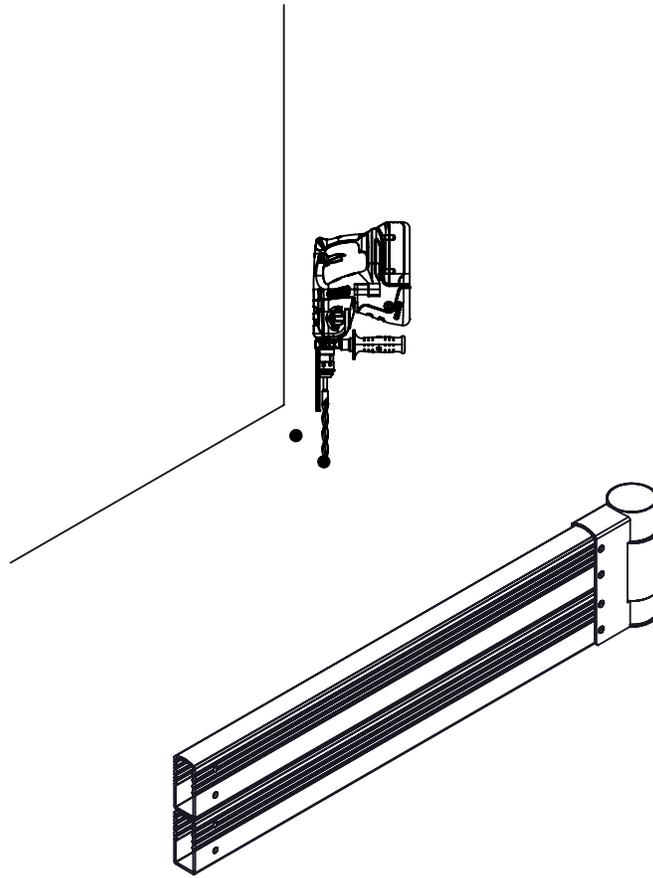



1/2"  
(12mm)  
Hammer Drill  
Drill Bit

Hammer  
Drill



# Step 15

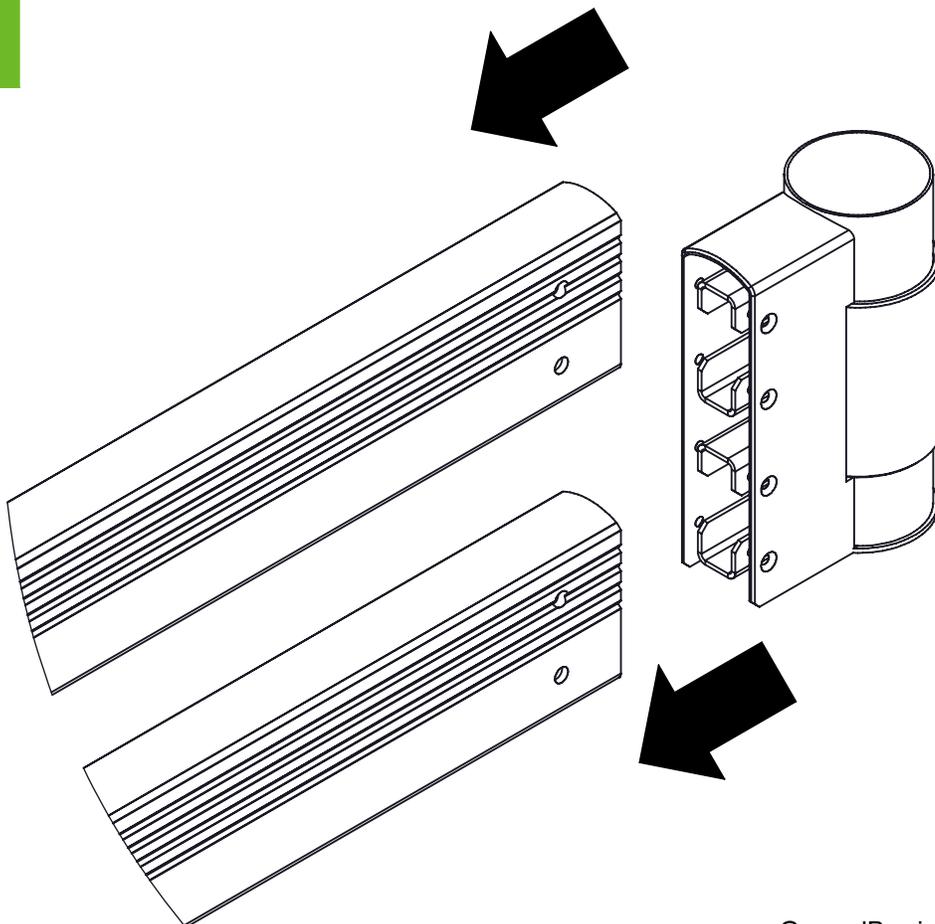


# Step 16

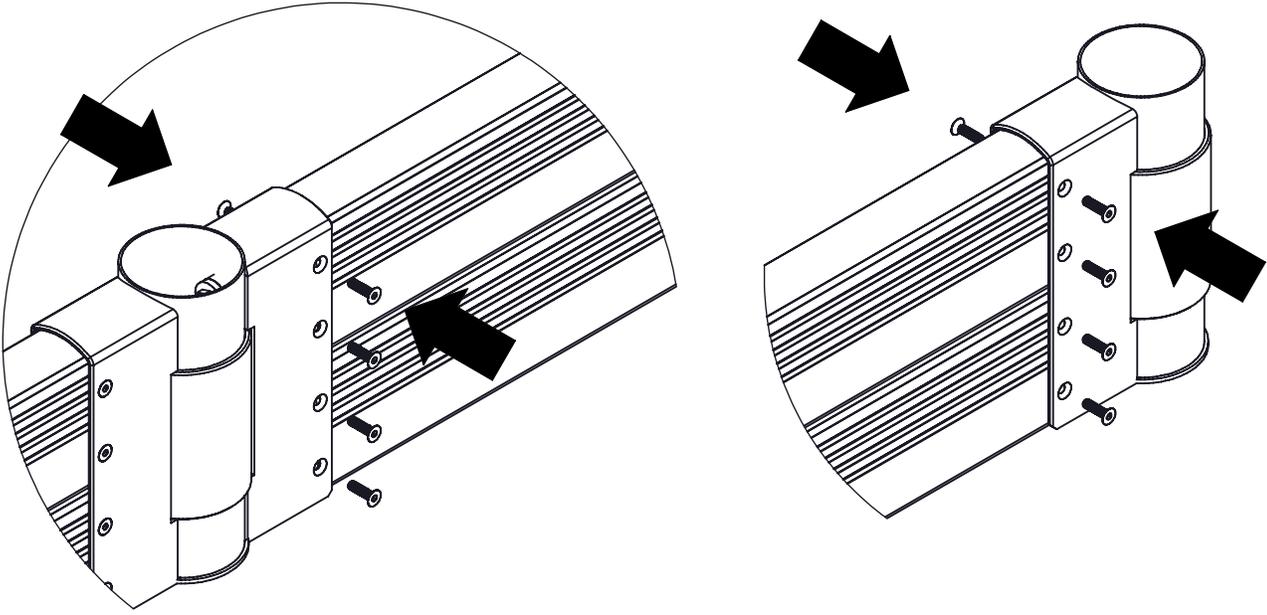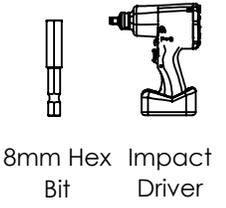

# Step 17

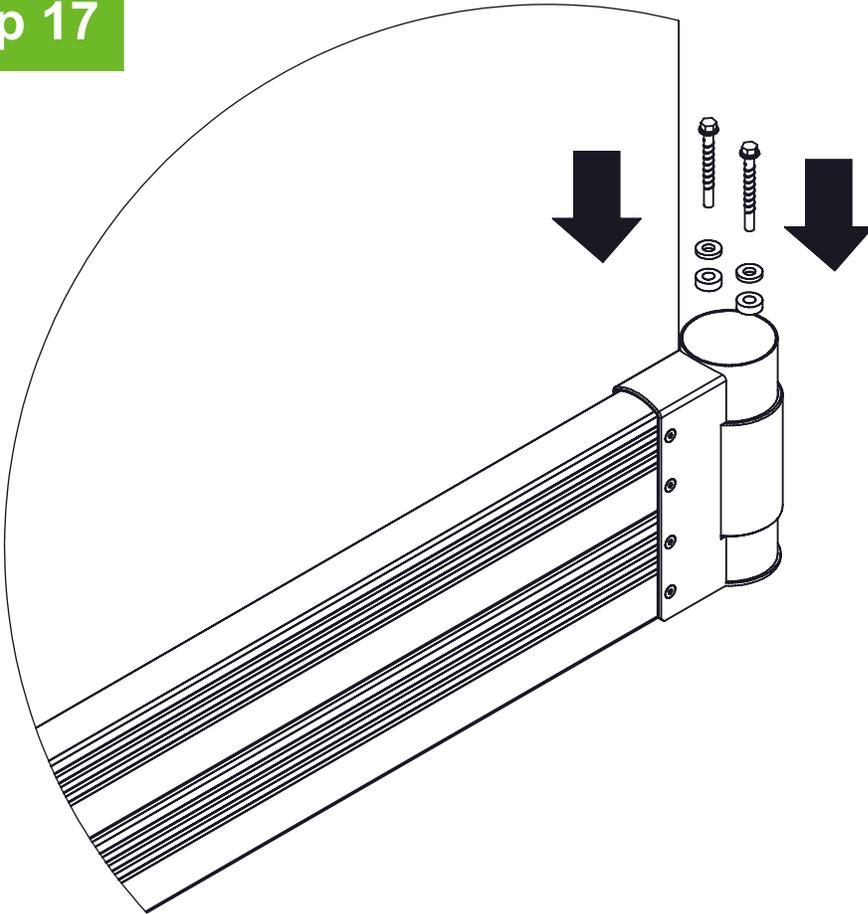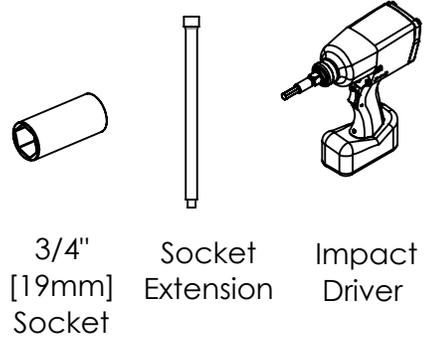

## Step 18

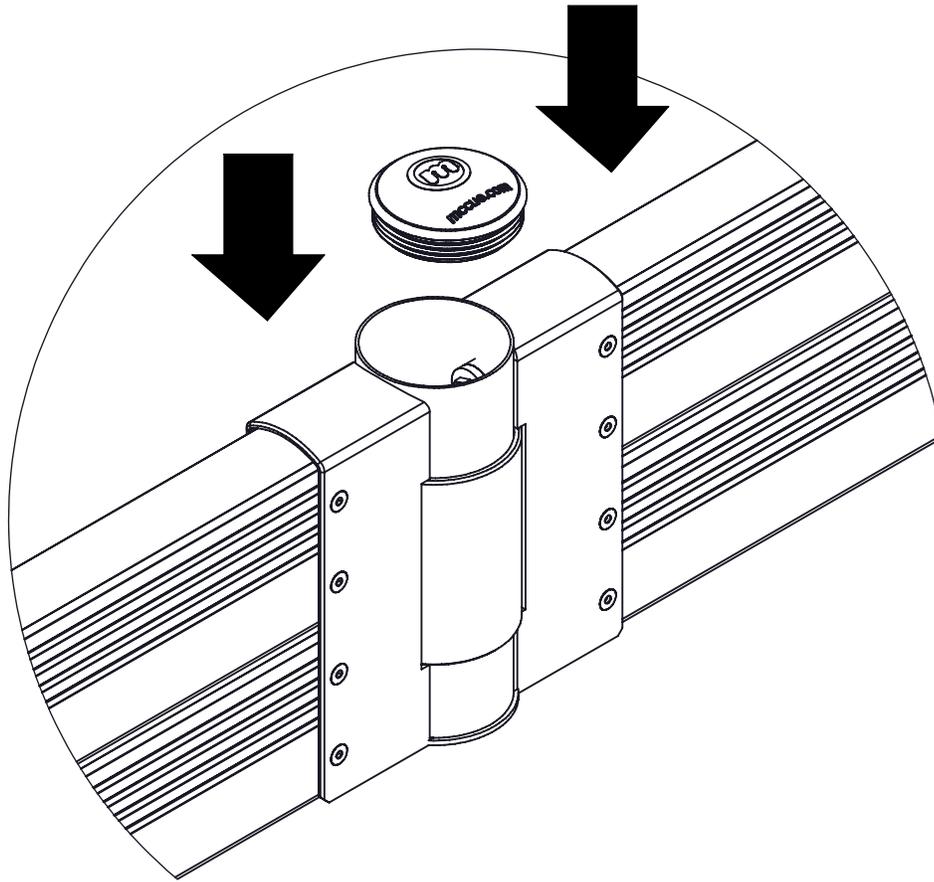

## Step 19

